




Connecting the Märklin 6021 Control Unit

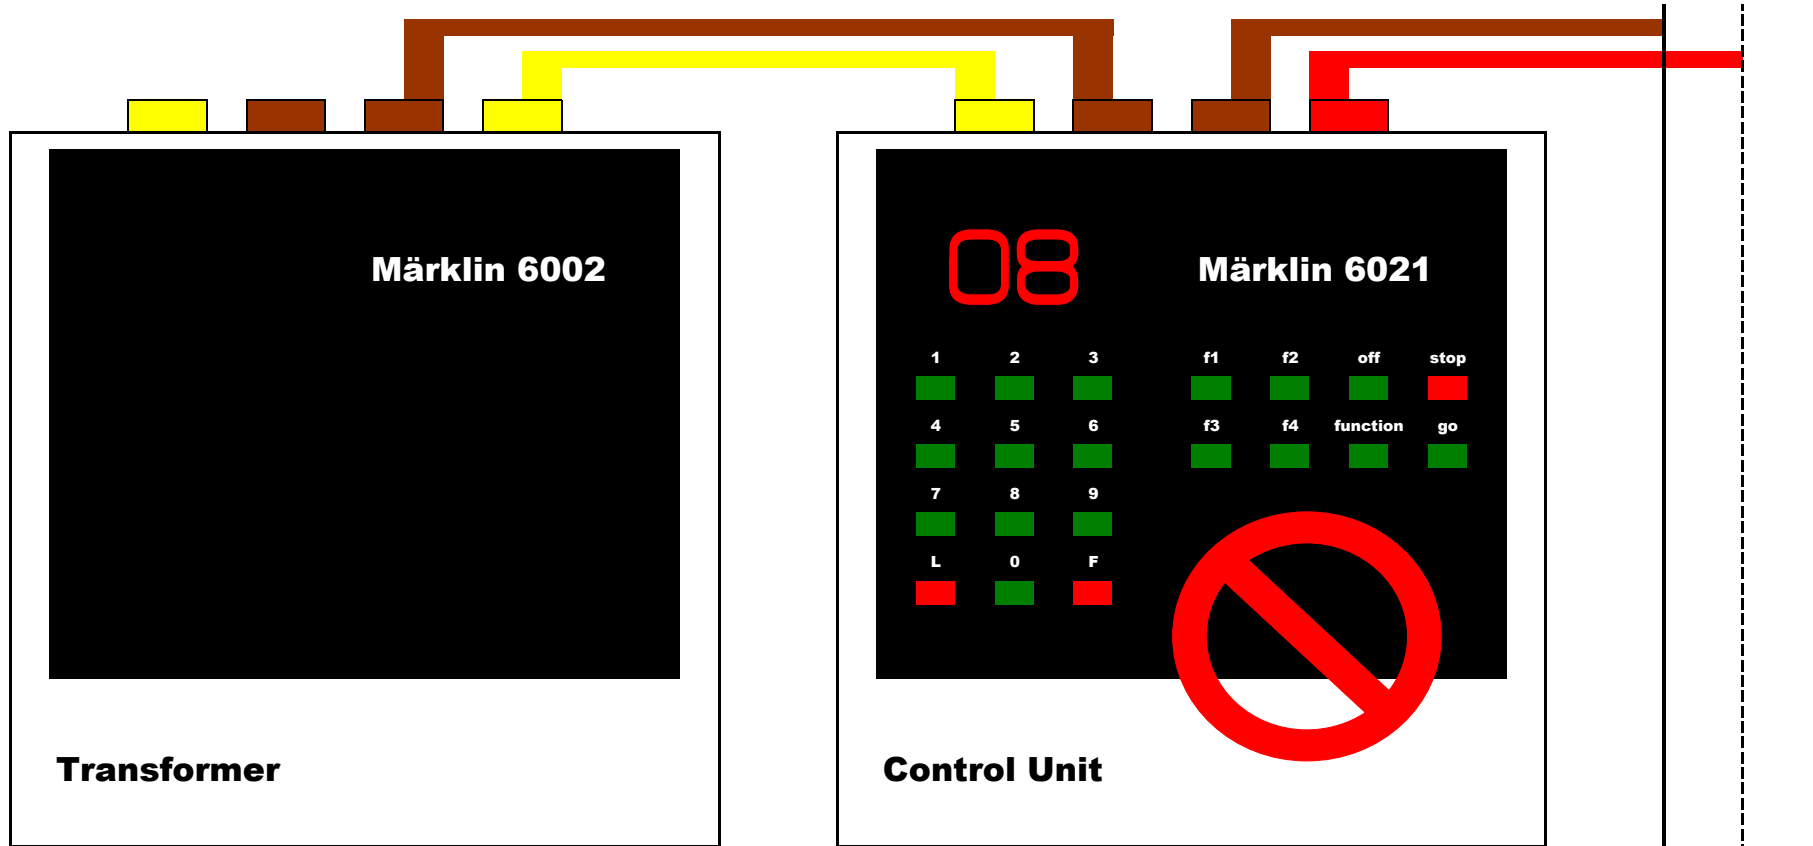


Setting the DIP-switches on the back of the 6021

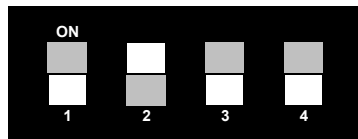

Motorola I og II format

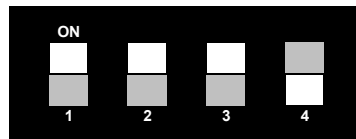

Motorola II format

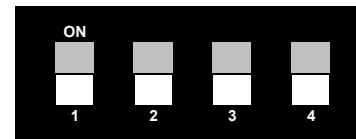

Motorola I format